


User Guide for Connecting Vriddhi L1 and Vriddhi Mini with ANDROID RD service


STEP 1: Pair the Vriddhi device Bluetooth (**VriddhiMxxxxxx** or **BPFSxxxxx**) with android Mobile phone.

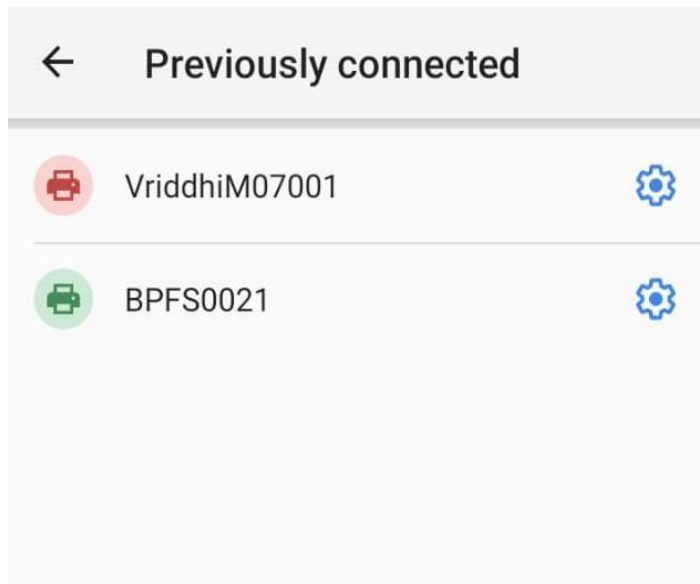


STEP 2: Install ACPL L1 RD Service Application from google play store and configure it by opening the Settings option by clicking the dots on the top right corner



STEP 3: Click on About to enter Bluetooth device list

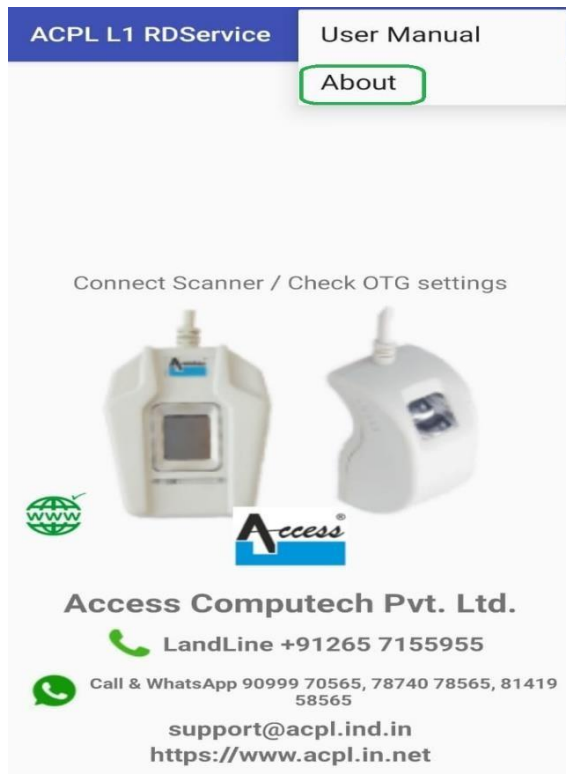

STEP 4: Select **VriddhiMxxxxxx** or **BPFSxxxxx** device from paired Bluetooth device list and click on mobilephone back button.

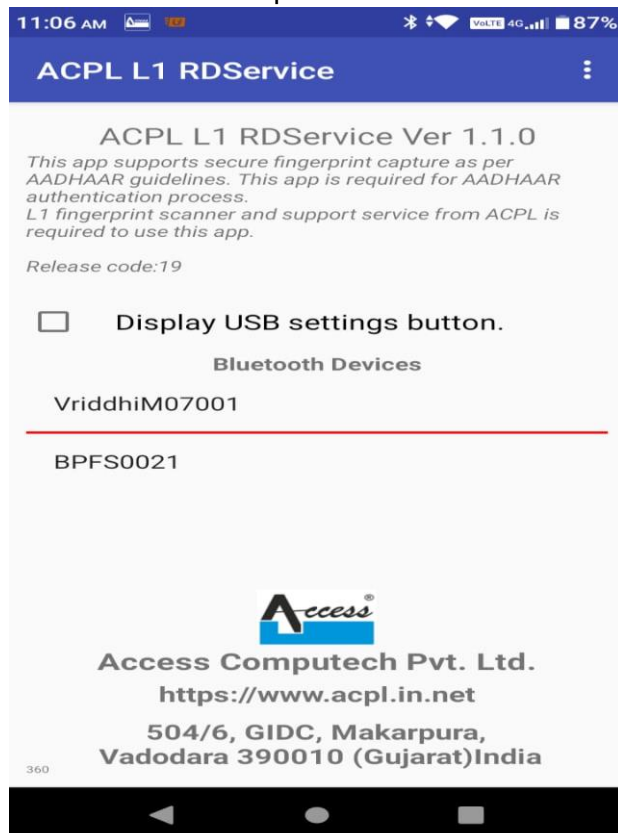

STEP 5: Wait until device status is Shown “Scanner Ready” and Click on Scanner Test button for testing.



STEP 6: After successful data capture of fingerprint, status will show as “Success”.

